


## 黑鲨黑魔导游戏手柄说明书

附件名称	设计师
BH02	康健
基本印刷工艺要求	
材质工艺：105G哑粉纸+单黑印刷+1专（2420C）	
成品尺寸：80*120mm	

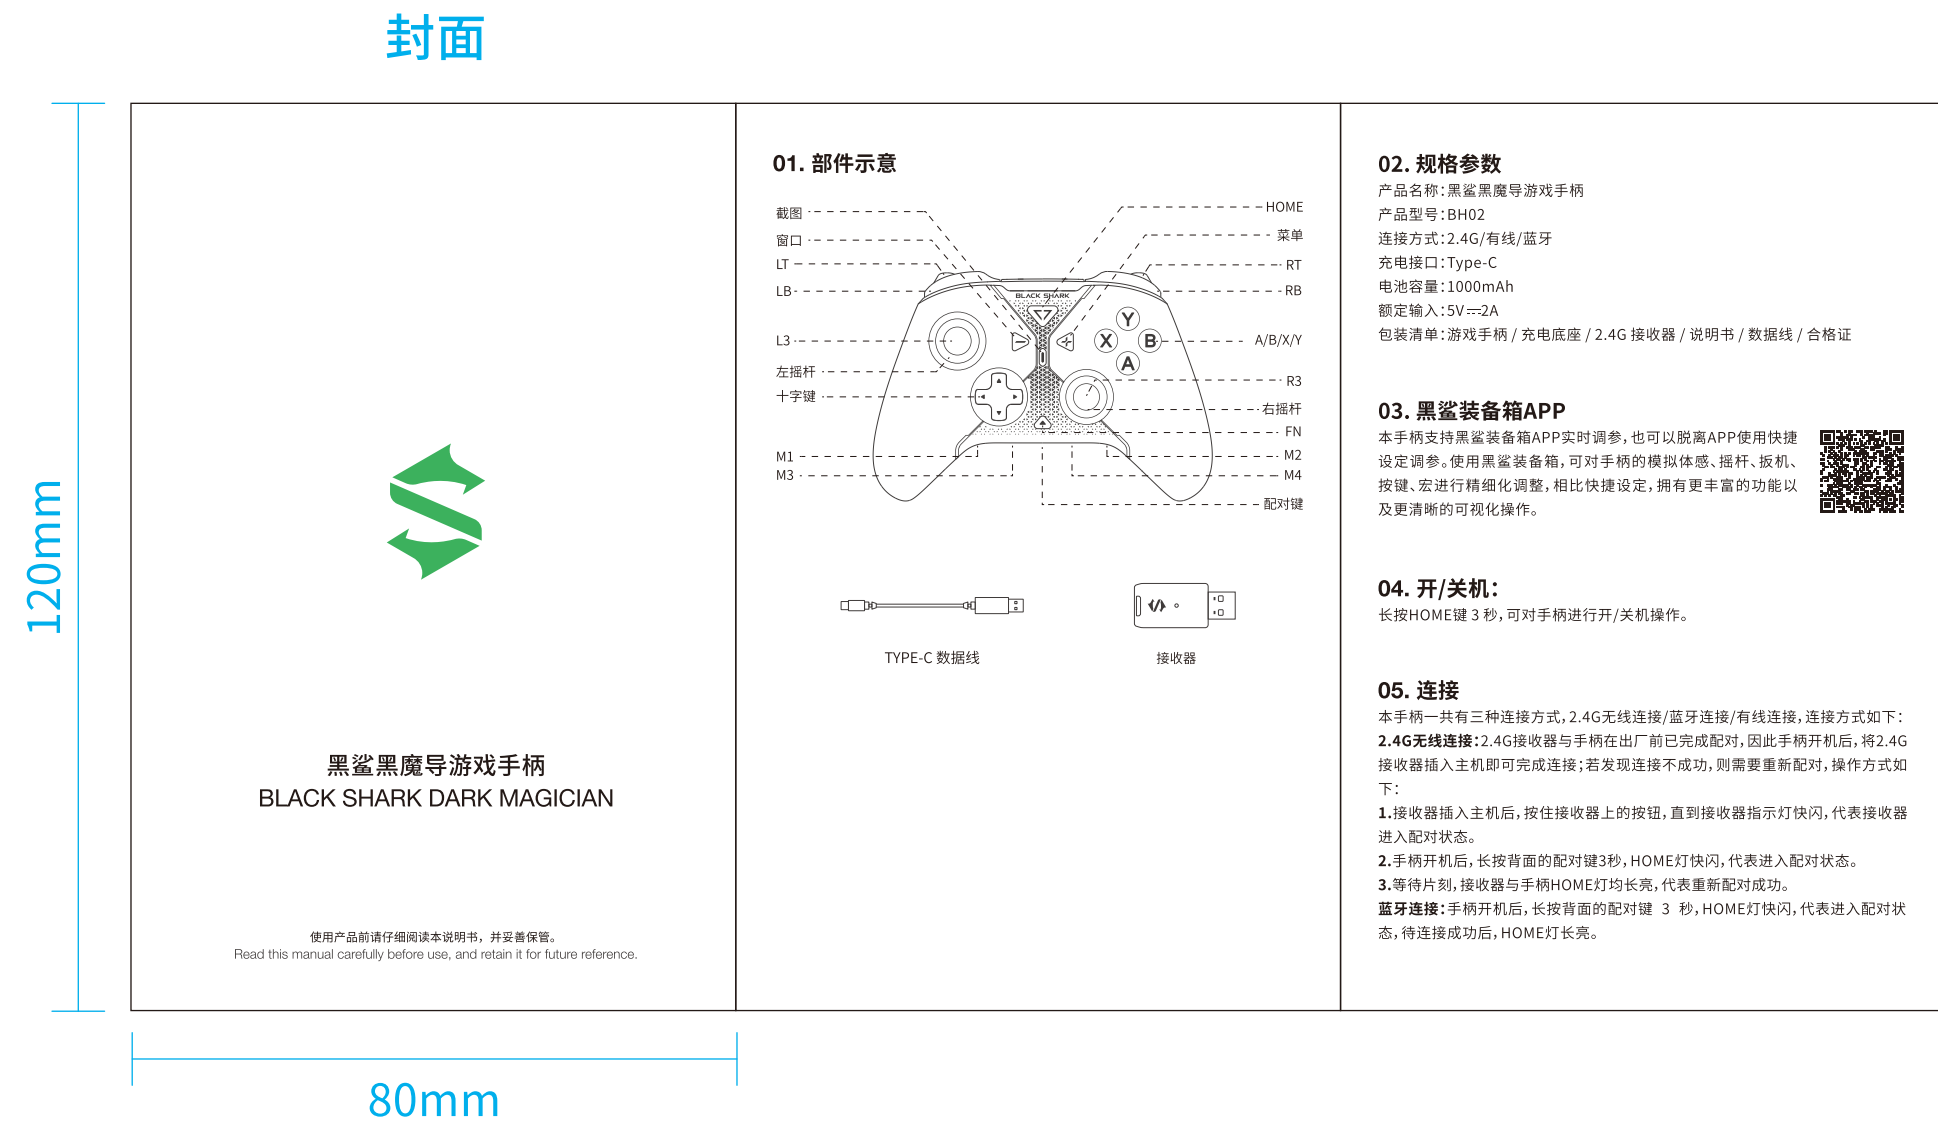

<p>安全信息、服务政策等更多详情，以及更多语言版本，请扫码查看在线说明书。</p> <p>For more information about safety, regulations, multilingual information, etc, please scan the QR code to view the online user manual.</p>	<p><b>01. NAME OF EACH PART</b></p> <p>Product Name: Black Shark Dark Magician Product Model: BH02 Connection: 2.4G / wired / Bluetooth Charging method: Type-C Battery capacity: 1000mAh Rated input: 5V/1.2A Packaging list: Wireless Controller / Charging Stand / 2.4G Adapter / User Manual / USB Cable / After-sales Card</p> <p>This grip supports real-time adjustment by Black Shark GameBox APP, so you can adjust it from APP and use physical settings to adjust the parameters. Using the Black Shark GameBox, you can fine-tune the analog sensitivity, joystick, trigger, button and macros of the joystick, which has richer features and clearer instructions compared with the shortcut settings.</p>	<p><b>02. SPECIFICATIONS</b></p> <p>Product Name: Black Shark Dark Magician Product Model: BH02 Connection: 2.4G / wired / Bluetooth Charging method: Type-C Battery capacity: 1000mAh Rated input: 5V/1.2A Packaging list: Wireless Controller / Charging Stand / 2.4G Adapter / User Manual / USB Cable / After-sales Card</p> <p><b>03. SHARK ARSENAL</b></p> <p>This grip supports real-time adjustment by Black Shark GameBox APP, so you can adjust it from APP and use physical settings to adjust the parameters. Using the Black Shark GameBox, you can fine-tune the analog sensitivity, joystick, trigger, button and macros of the joystick, which has richer features and clearer instructions compared with the shortcut settings.</p>	<p>2. After the joystick is turned on, press and hold the pairing button on the back of the joystick for 3 seconds, the HOME light will flash fast, which means the joystick is in pairing state.</p> <p>3. Wait for a moment, the receiver and joystick HOME light will be on, it means the pairing is successful.</p> <p>Bluetooth connection: After the joystick is turned on, press and hold the pairing button on the back for 3 seconds, the HOME light will flash fast, which means it enters the pairing state, and when the connection is successful, the HOME light will light up.</p> <p>Wired connection: After the joystick is turned on, use the Type-C cable to connect the controller to the host.</p> <p>Note: This controller supports PC, NS, Android/iOS modes, after connecting with the host, you need to switch to the mode of the corresponding host to use it normally, the default is PC mode.</p> <p>Steam platform: you need to check "XBOX Configuration Support" in "Settings - Controller - General Controller Settings" of the steam software, otherwise it may lead to unrecognized problems in the game.</p> <p>Switch platform: after connecting to the Switch with a wired/2.4G connection, you need to open "Settings - Stick &amp; Sensor - Pro Stick Wired Connection".</p> <p><b>06. MODE SWITCH</b></p> <p>This joystick supports PC, NS, Android/iOS modes, you need to switch to the corresponding mode after connecting to use it normally, the settings are as follows:</p> <p>Long press A+HOME button for 3 seconds, until the HOME light turns red, it means switch to NS mode, applicable to switch platform.</p> <p>Press and hold B+HOME button for 3 seconds until the HOME light turns green, it means switching to PC mode.</p> <p>Long press X+HOME button for 3 seconds until the HOME light turns blue, it means switch to Android/iOS mode (only support before-adjusted games).</p> <p>Press and hold the Y+HOME button for 3 seconds until the HOME light turns yellow to switch to mapping mode.</p> <p><b>07. REMAP</b></p> <p>To switch to Android/iOS mode, you can change the key through the APP (Black Shark gear box), and to switch to mapping mode, you can use the mapping function through the APP(Black Shark gear box).</p>	<p><b>09. 宏录制/宏定义</b></p> <p>本手柄不支持宏录制宏定义，3秒A+HOME之后可以进入APP对手柄进行宏定义设置。</p> <p><b>10. 模拟摇杆模式</b></p> <p>本手柄支持模拟摇杆模式，在部分需要高精度的竞技类电竞游戏中使用，从默认状态下切换到模拟摇杆模式有以下两种方式：1.长按A+HOME键3秒，直到HOME灯变为蓝色，代表切换到NS模式；2.长按X+HOME键3秒，直到HOME灯变为蓝色，代表切换到PC模式；3.长按Y+HOME键3秒，直到HOME灯变为蓝色，代表切换到Android/iOS模式（仅支持前调参类游戏）；4.长按B+HOME键3秒，直到HOME灯变为蓝色，代表切换到映射模式。</p> <p><b>11. 摇杆死区校准</b></p> <p>本手柄支持摇杆死区校准，在部分需要高精度的竞技类电竞游戏中使用，从默认状态下切换到模拟摇杆模式有以下两种方式：1.长按A+HOME键3秒，直到HOME灯变为蓝色，代表切换到NS模式；2.长按X+HOME键3秒，直到HOME灯变为蓝色，代表切换到PC模式；3.长按Y+HOME键3秒，直到HOME灯变为蓝色，代表切换到Android/iOS模式（仅支持前调参类游戏）；4.长按B+HOME键3秒，直到HOME灯变为蓝色，代表切换到映射模式。</p> <p><b>12. 摇杆扳机校准</b></p> <p>本手柄支持扳机校准，在部分需要高精度的竞技类电竞游戏中使用，从默认状态下切换到模拟摇杆模式有以下两种方式：1.长按A+HOME键3秒，直到HOME灯变为蓝色，代表切换到NS模式；2.长按X+HOME键3秒，直到HOME灯变为蓝色，代表切换到PC模式；3.长按Y+HOME键3秒，直到HOME灯变为蓝色，代表切换到Android/iOS模式（仅支持前调参类游戏）；4.长按B+HOME键3秒，直到HOME灯变为蓝色，代表切换到映射模式。</p> <p><b>13. 陀螺仪校准</b></p> <p>本手柄支持陀螺仪校准，在部分需要高精度的竞技类电竞游戏中使用，从默认状态下切换到模拟摇杆模式有以下两种方式：1.长按A+HOME键3秒，直到HOME灯变为蓝色，代表切换到NS模式；2.长按X+HOME键3秒，直到HOME灯变为蓝色，代表切换到PC模式；3.长按Y+HOME键3秒，直到HOME灯变为蓝色，代表切换到Android/iOS模式（仅支持前调参类游戏）；4.长按B+HOME键3秒，直到HOME灯变为蓝色，代表切换到映射模式。</p> <p><b>14. 震动调节</b></p> <p>本手柄支持震动调节，在部分需要高精度的竞技类电竞游戏中使用，从默认状态下切换到模拟摇杆模式有以下两种方式：1.长按A+HOME键3秒，直到HOME灯变为蓝色，代表切换到NS模式；2.长按X+HOME键3秒，直到HOME灯变为蓝色，代表切换到PC模式；3.长按Y+HOME键3秒，直到HOME灯变为蓝色，代表切换到Android/iOS模式（仅支持前调参类游戏）；4.长按B+HOME键3秒，直到HOME灯变为蓝色，代表切换到映射模式。</p> <p><b>15. 电池说明</b></p> <p>本手柄支持电池说明，在部分需要高精度的竞技类电竞游戏中使用，从默认状态下切换到模拟摇杆模式有以下两种方式：1.长按A+HOME键3秒，直到HOME灯变为蓝色，代表切换到NS模式；2.长按X+HOME键3秒，直到HOME灯变为蓝色，代表切换到PC模式；3.长按Y+HOME键3秒，直到HOME灯变为蓝色，代表切换到Android/iOS模式（仅支持前调参类游戏）；4.长按B+HOME键3秒，直到HOME灯变为蓝色，代表切换到映射模式。</p> <p><b>16. 一键重置配置</b></p> <p>本手柄支持一键重置配置，在部分需要高精度的竞技类电竞游戏中使用，从默认状态下切换到模拟摇杆模式有以下两种方式：1.长按A+HOME键3秒，直到HOME灯变为蓝色，代表切换到NS模式；2.长按X+HOME键3秒，直到HOME灯变为蓝色，代表切换到PC模式；3.长按Y+HOME键3秒，直到HOME灯变为蓝色，代表切换到Android/iOS模式（仅支持前调参类游戏）；4.长按B+HOME键3秒，直到HOME灯变为蓝色，代表切换到映射模式。</p> <p><b>17. 详细功能操作说明</b></p> <p>本手柄支持详细功能操作说明，在部分需要高精度的竞技类电竞游戏中使用，从默认状态下切换到模拟摇杆模式有以下两种方式：1.长按A+HOME键3秒，直到HOME灯变为蓝色，代表切换到NS模式；2.长按X+HOME键3秒，直到HOME灯变为蓝色，代表切换到PC模式；3.长按Y+HOME键3秒，直到HOME灯变为蓝色，代表切换到Android/iOS模式（仅支持前调参类游戏）；4.长按B+HOME键3秒，直到HOME灯变为蓝色，代表切换到映射模式。</p> <p><b>18. 注意事项</b></p> <p>本手柄支持注意事项，在部分需要高精度的竞技类电竞游戏中使用，从默认状态下切换到模拟摇杆模式有以下两种方式：1.长按A+HOME键3秒，直到HOME灯变为蓝色，代表切换到NS模式；2.长按X+HOME键3秒，直到HOME灯变为蓝色，代表切换到PC模式；3.长按Y+HOME键3秒，直到HOME灯变为蓝色，代表切换到Android/iOS模式（仅支持前调参类游戏）；4.长按B+HOME键3秒，直到HOME灯变为蓝色，代表切换到映射模式。</p>
--	---	--	---	--